


Dear customer, please read this manual before you use KT-LCD3 instrument. The manual will guide you use the instrument correctly to achieve a variety of vehicle control and vehicle status display.

Functions and Display

Instruments using the structure form of instrument body portion and the operation buttons are designed separately.

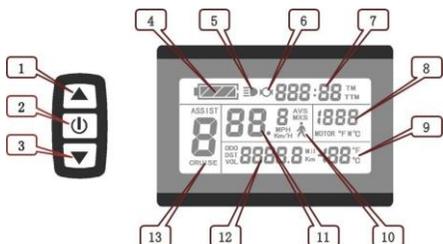

1		UP Button	10		6Km/H push power assist
2		SW Button	11		Riding speed(metric)
3		DOWN Button			Riding speed (imperial)
4		Battery capacity indicator			Single maximum speed
5		Backlight and headlights			Single average speed
6		The brake display	12		Distance(metric)
7		Single trip time			Distance (imperial)
		Total trip time			Trip distance
8		Power display			Total distance
		Motor temperature		Battery voltage	
		Motor fahrenheit	13		Pas level
9		Environment temperature			Cruise
		Environment fahrenheit			

Operation

1. ON/OFF

Hold long to turn on the power, and hold long for a second time to turn off the power. When the motor stops driving and when the e-bike is not used for a consecutive 5 minutes, it will automatically shut down and turn off the motor power supply.

2. Display 1



Hold button to start up and enter display 1.

2.1 Turn on backlight and headlights



Hold long to turn on backlight and headlights (the controller should have headlight drive output function); hold long again to turn off the backlight and headlights.

2.2 Assist ratio gear (ASSIST) switch



Hold or shortly to switch 1-5 file gear. Gear 1 is for the minimum power, gear 5 is for the highest power. Each startup will automatically restore the gear shutdown last time(the user can set randomly). Gear 0 is without booster function.

2.3 6Km/H assist promotion function



Hold and flashes, the vehicle drives at the speed not more than 6Km /h. Release button, the function is invalid.

2.4 Cruise function



After the cruise function is turned on, the trip riding speed is greater than 7km/ h, hold long and enter cruise, the CRUISE lit. Brake or hold any button to cancel.

2.5 Display and delete of single Data



After power on for 5 seconds, hold and at the same time, single trip riding time (TM) and single trip distance (DST) flash, hold button shortly, the content of both is cleared. If failed holding the button within 5 seconds, it will automatically return the display interface after 5 seconds, original content is preserved.

2.6 Battery capacity indicator display



The meter can automatically identify 24V, 36V, 48V battery capacities when it is supporting use with the specified controller. When the battery capacity is over 70%, the four power displays of the meter are lit, when the battery capacities drop, the four power displays are off in order, when the power capacity is less than 15%, the four power displays are totally turned off. When the controller is power off due to voltage shortage, the power display frame flashes, indicating the vehicle has been in voltage shortage and waiting for shutdown currently.

3. Display 2



Hold button shortly in display 1 to enter display 2. Total trip time (TTM) and total distance (ODO), single average speed (AVS), motor operating temperature

(MOTOR °C) are shown on display 2.

In the riding mode after 5 seconds, display 2 automatically returns to display 1, and the original motor power (MOTOR W) display is replaced with motor operating temperature display (MOTOR °C) display (the internal motor should be equipped with the temperature sensor and the output of temperature detection signal).

4. Display 3

Hold  button shortly in display 2 to enter display 3. Single maximum speed (MXS), Real-time Voltage (VOL) are shown on display 3.



In the riding condition, 5 seconds later, a single maximum speed (MXS) display automatically returns to the real riding speed (Km/H).

5. In display 3, hold  button shortly and the display will re-enter display 1.

6. Hold  button to turn off the display and the power supply of controller.

7. Automatically prompt interface

7.1 Error Code display

Error Code	Definition
01__info	Throttle Abnormality
03__info	Motor Hall Signal Abnormality
04__info	Torque sensor Signal Abnormality
05__info	Axis speed sensor Abnormality(only applied to torque Sensor)
06__info	Motor or controller has short circuit Abnormality



Electronic control system failure will display (flashing) fault code. Once the fault was removed, it automatically exits from the fault code display interface.

7.2 Motor temperature alarm

When the motor temperature (the internal motor should be equipped with the temperature sensor and the output of temperature detection signal) is over the warning value, MOTOR °C (°F) flashes to alarm at any display, meanwhile the motor controller will offer the appropriate protection to motor.

General Project Setting

1. Set maximum riding speed

After power on for 5 seconds, hold  and  at the same time, maximum riding speed Km/H and MXS flash, hold  or  shortly to set the maximum riding speed (default 25Km/H). Hold  button shortly and go to the next parameter settings.



2. Wheel diameter setting

The wheel diameter will be set after finishing setting the maximum riding speed,



wheel diameter specifications flashes. Hold  or  shortly to set the specifications of wheel diameter. Select the range 6,8,10,12,14,16,18,20,22,24,26,700c and 28 inches. Hold  button shortly and go to the next parameter settings.

3. Set the metric units



The metric units will be set after finishing setting wheel diameter, Km/H and Km flash. Hold  or  shortly and select the three metric units of speed, mileage, and ambient temperature in synchronization.

Display	Metric	Imperial
Riding speed	Km/H	MPH
Total distance	Km	Mil
Environment temperature	°C temperature	°F fahrenheit

4. Km/H and Km stop flash after metric unit setting is completed. Hold  button shortly again to re-enter the maximum riding speed setting interface; or hold  button long to exit from setting environment of routine projects and save the setting values, returning to display 1.


5. Exit from routine project setting

All three routine project settings can exit from the setting environment and return to the display if hold  button long after each setting is completed, meanwhile the setting values are saved.


Under each setting interface, if the button failed holding for more than 1 minute, it will automatically return to display 1, and the setting value is invalid.

Outline Drawings and Dimensions


1. Dimensions of main instrument body

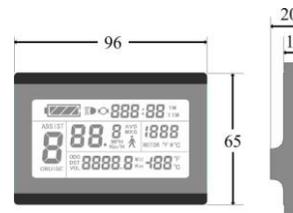

2. Mounting dimensions of double brackets

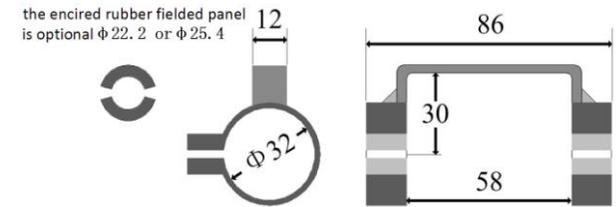

3. Dimensions of button box

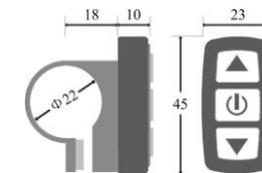

4. Wiring diagram

